



QUICK REFERENCE  
J3 BACK GUIDE



# OVERVIEW



- STEP 1 Contour Depth
- STEP 2 Level of Support
- STEP 3 Back Support Height
- STEP 4 Backrest Width
- STEP 5 Mounting Hardware

For a custom-fit J3 Backrest, follow this 5-Step Guide to determine your **J3 Smart Part Number.**

*The part number that is generated over the next several pages is for illustrative purposes. Actual part numbers may vary.*

<b>J3</b>	-	-	-	-	-
J3 PART NUMBERS BEGIN WITH "J3"	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5

# STEP 1

## CONTOUR DEPTH

Backrests shown  
from top view.



Posterior (PA)




Posterior  
Lateral (PL)



Posterior Deep  
Lateral (PDL) &  
Posterior Deep  
Contour (PDC)



**Step 1** will determine Contour Depth.  
How much lateral support is needed: Posterior,  
Posterior Lateral, Posterior Deep Lateral or Posterior  
Deep Contour?

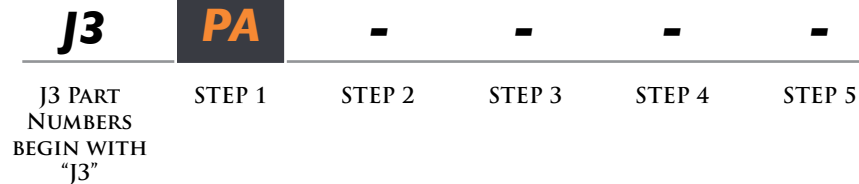

# STEP 2

LEVEL OF SUPPORT

Each individual, depending on their functional needs and level of trunk stability, requires a different level of support.



Shoulder Height (SH)

Upper Thoracic (UT)

Mid Thoracic (MT)

Lower Thoracic (LT)

Step 2 will determine Level of Support.  
Choose from Lower Thoracic up to  
Shoulder Height.

<b>J3</b>	<b>PA</b>	<b>UT</b>	-	-	-
J3 PART NUMBERS BEGIN WITH "J3"	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5

# STEP 3

## BACK SUPPORT HEIGHT

Within each level of support (Step 2), we offer short, medium, and tall height options to accommodate differences in the user's torso height.



Short (S)



Medium (M)




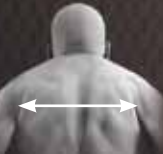
Tall (T)

In **Step 2** the user's Level of Support is chosen. Each of these support levels are offered in three Back Support Heights: Short, Medium, or Tall (**Step 3**).

<b>J3</b>	<b>PA</b>	<b>UT</b>	<b>M</b>	-	-
J3 PART NUMBERS BEGIN WITH "J3"	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5

# STEP 4

## BACKREST WIDTH

	Posterior							Posterior Lateral					Posterior Deep Lateral & Posterior Deep Contour				
Width	12	14	16	18	20	22	24	26	12	14	16	18	20	14	16	18	20
 <b>Chair Back Cane Width</b> Based on outside back cane to outside back cane.	12	14	16	18	20	22	24	26	12	14	16	18	20	14	16	18	20
	to	to	to	to	to	to	to	to	to	to	to	to	to	to	to	to	to
 <b>Trunk Width</b> Measure the widest part of the trunk supported by the back.	11	13	15	17	19	21	23	25	9.5	11.5	13.5	15.5	17.5	11	13	15	17

**Step 4** will determine the Backrest Width. Measure the widest part of the trunk covered by the back. Reference the chart to the left to select which width works best for the user.

<b>J3</b>	<b>PA</b>	<b>UT</b>	<b>M</b>	<b>18</b>	<b>-</b>
J3 PART NUMBERS BEGIN WITH "J3"	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5



# STEP 5

## MOUNTING HARDWARE



**Standard (SH)**  
Standard Hardware offers 1 1/2" posterior depth adjustment and may be required to achieve a maximum recline angle (22 degrees) without impacting seat depth.



**Extended (AH)**  
Extended Hardware offers an additional 1 1/2" of posterior depth for a total of 3" of adjustability.



**LITE Mount™ (LM)**  
Ultralightweight permanent mount hardware.



**4-Point hardware (FS or FA)**  
Increased stability supports more force, 500 lb. weight capacity with hardware and over 22" wide shells. (FS hardware shown here)

In **Step 5** we'll select our mounting hardware. All backs accept Standard Adjustable Hardware or Extended Adjustable Hardware.

LITE Mount Hardware available on LT and MT support levels and Short (S) and Tall (T) support heights. 4 point hardware available on the UT and SH support levels.

<b>J3</b>	<b>PA</b>	<b>UT</b>	<b>M</b>	<b>I8</b>	<b>SH</b>
J3 PART NUMBERS BEGIN WITH "J3"	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5

# RECAP


EXAMPLE SMART  
PART NUMBER

## Example Smart Part Number: **J3PAUTM18SH**

- STEP 1 — **J3** J3 Back
- STEP 1 — **PA** Posterior support, meets 25mm posterior contour.
- STEP 2 — **UT** Designed for supporting the back through the upper thoracic spine.
- STEP 3 — **M** Medium height back in the upper thoracic support position.
- STEP 4 — **18** Designed to fit wheelchairs 18-20 inches in width.
- STEP 5 — **SH** Standard adjustable attaching hardware.

Let's **Recap** how we obtained our  
**J3 Smart Part Number.**

*This part number is for illustrative purposes.  
Actual part numbers may vary.*

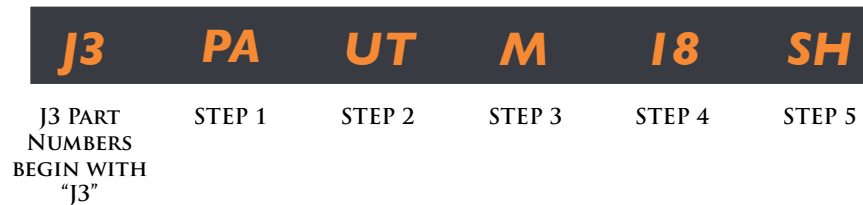



## Spine-Align Kits


Spine-Align Mini Kit I



Spine-Align Mini Kit II



## Spine-Align Components

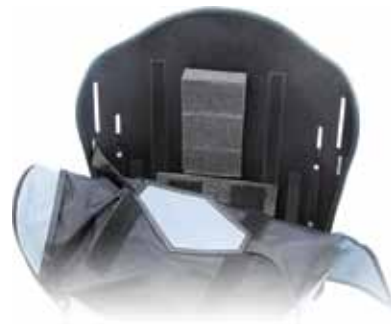

The components slip between the shell and the cover. It is not necessary to open the foam cover.



Small Lumbar



Large Lumbar



Lateral Shim



Posterior/  
Lateral Pelvic



Wedge



Curved Shim



Flat Shim



Small Bean Bag




Large Bean Bag

## Headrest Pads



## Headrest Mounting Hardware

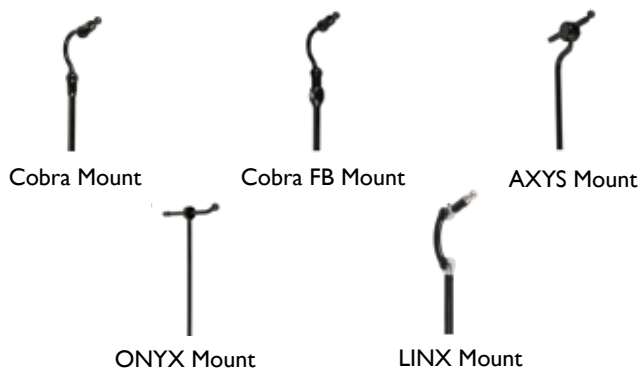

## Laterals



Fixed Lateral



Angle adjustable  
Swing-Away Laterals



CradleU Lateral

## Chest Strap Harness




Contour Style

Classic Style

Center Opening  
with Buckle

## Vanity Flap





For more information, please call 1-800-333-4000

© 2010 Sunrise Medical. Sunrise Medical and JAY® are trademarks of Sunrise Medical.



800-333-4000 In Canada 800-263-3390  
[www.SunriseMedical.com](http://www.SunriseMedical.com)

© 07.2013 Sunrise Medical (US) LLC  
105206 Rev. E